 




USB BATTERY PACK USER GUIDE

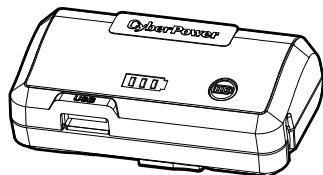

Model: CPBC2200 Series

IMPORTANT! PRIOR TO FIRST USE

The CPBC2200 Series is packaged in a protection mode for shipping. Prior to use, connect the CPBC2200 Series to a USB power source to set it to normal mode and the suggested a full 8-hour charge.

 
INTRODUCTION

The USB Battery Pack (CPBC2200 Series) is a rechargeable lithium-ion battery that is designed for powering mobile devices such as phones, MP3 players, and handheld gaming devices while away from other power sources.

FEATURES

- Compact and portable design
- Built in USB power cable
- Battery life indicator

PRODUCT VIEW:

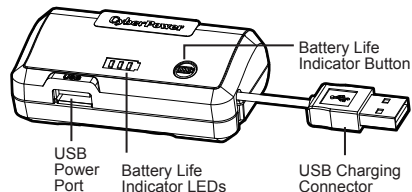

PACKAGE CONTENTS

- USB Battery Pack (CPBC2200 Series)
- User Guide

SPECIFICATIONS

Battery Capacity: 2200mA

Rated Output: DC 5V 1A

Dimension: 3.4 x 1.7 x 0.9 inch

Environment: Storage: 14 to 122°F (-10 to 50°C)

Operation: 32 to 104°F (0 to 40°C)

 
Rated Input: DC 5V 600mA

PC Charging time: ~4 Hrs

Weight: 2.57 oz

TO CHARGE THE BATTERY PACK

Charge the USB Battery Pack by attaching the USB charging connector to any powered USB port, including but not limited to a desktop computer, laptop, USB powered hub or USB wall charger. Recharge the CPBC2200 Series every 3 months when not use to ensure the best battery performance. The battery capacity may decline after 300 times usage.

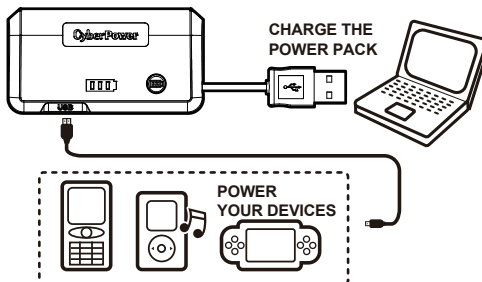

TROUBLE SHOOTING

Problem	Possible Cause	Solution
USB Battery Pack does not power the device.	1. The required power of device is over the 5 volt, 1 amp rating.	1. Check the power requirements of the device to be charged.
	2. The battery is out of power.	2. Charge the battery pack via a USB port.
USB Battery Pack does not charge.	1. Incorrect connection between charger and USB Battery Pack.	1. Re-attach the USB connector to a USB port.
	2. No power from the source.	2. Check that power is provided to the USB port.

SAFETY PRECAUTION

Before using the USB Battery Pack, please read the following warnings carefully. Use the product according to the procedures described in this manual. Failure to follow these safety precautions may result in fire, explosion, electrical shock or other dangers.

1. Do not disassemble this product, or any of its parts.
2. Store between 14 to 122°F (-10 to 50°C). Operate between 32 to 104°F (0 to 40°C).
3. Do not immerse this product in water or other liquids, as such use may result in fire or electrical shock. If water or other liquids enter the battery interior, unplug the product immediately from any attached power source or device.
4. Do not use this product with wet hands. Moisture in or on this product may result in electrical shock.
5. Do not expose this product to direct flame or leave it in an overheated condition, as the battery may explode.
6. Store this product in a cool and dry environment when not in use.
7. Do not puncture this product. Puncturing the battery may cause the release of harmful substances.
8. It is normal for the USB Battery Pack to become warm during charging.
9. Keep this product out of the reach of children. Ensure that all users read these warnings and instructions before using.
10. Please recycle USB Battery Pack in accordance with local environmental laws and regulations.

LIMITED PRODUCT WARRANTY

CyberPower offers limited product warranty for the hardware of the USB Battery Pack* and the product is free from material and manufacturing defects for one year. (*battery excluded) A reasonable purchase proof with date must be provided when submission. CyberPower's sole responsibility is to repair or replace the product if a material or manufacturing defect results in product failure during its normal use. The warranty is void if the product is damaged due to abuse, alteration, misuse, negligence, incorrect voltage supply, air/water pollution, accidents and natural disasters.

CyberPower Systems, Inc.
www.cpswww.com

© 2013 CyberPower Systems, Inc.

All rights reserved. Reproduction in whole or in part without permission is prohibited.

K09-0000173-00